

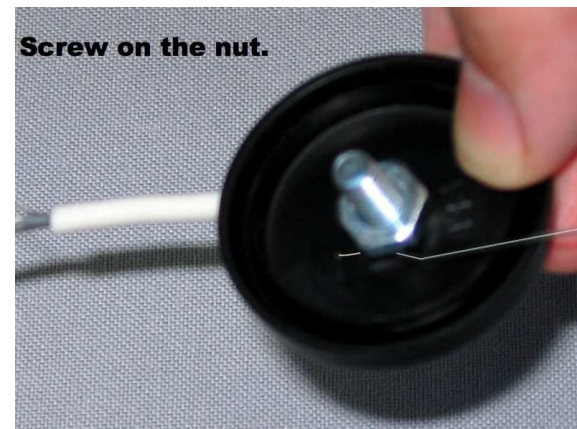
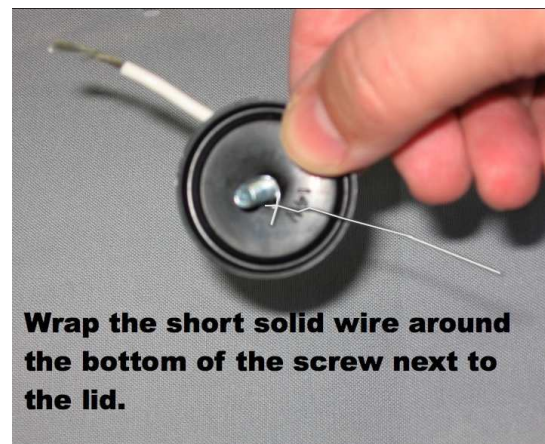



BYO Capacitor

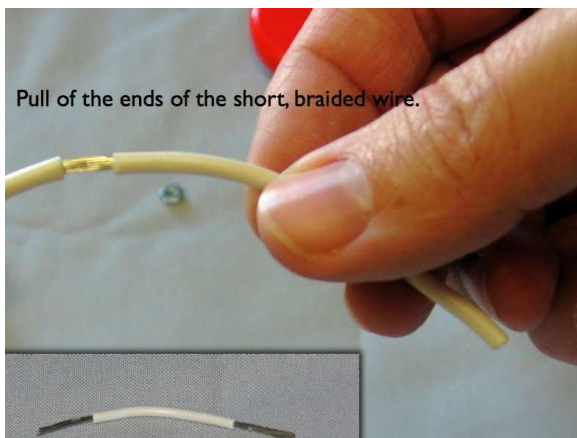


Wrap tape around the top and bottom of the foil.

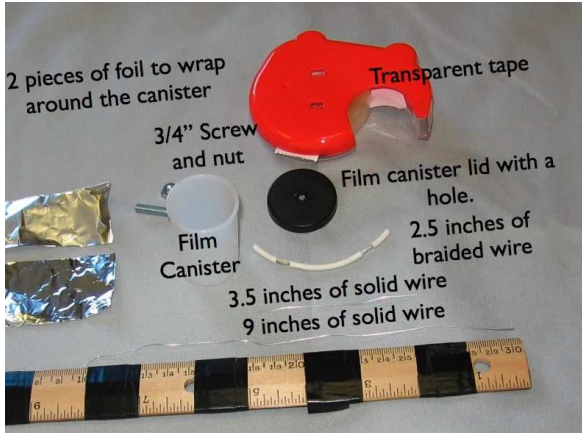

Wrap the long solid wire around the foil.

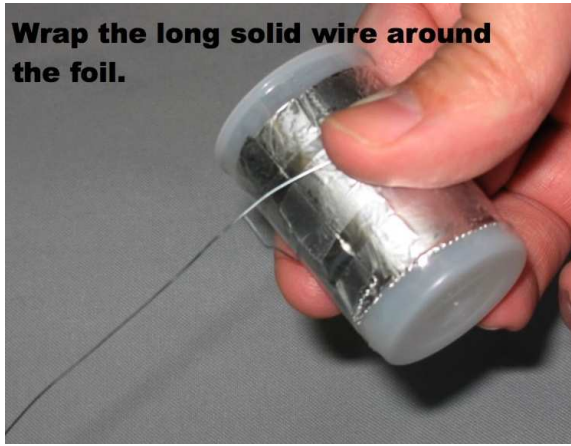


Twist the ends of this wire to hold it in place.

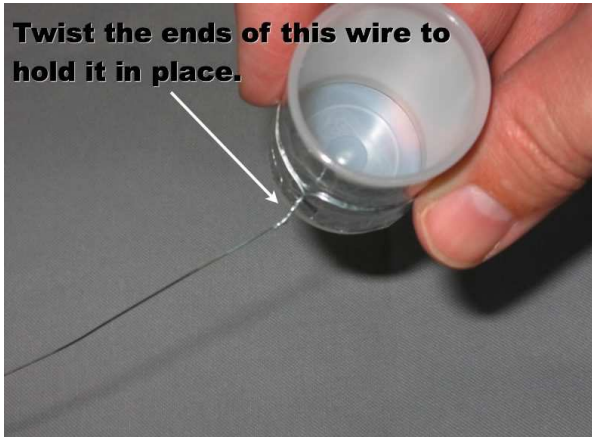

Bend the bottom wire as shown. It should touch the inside of the film canister when placed on the canister.



Tape the other piece of foil to the inside of the canister.

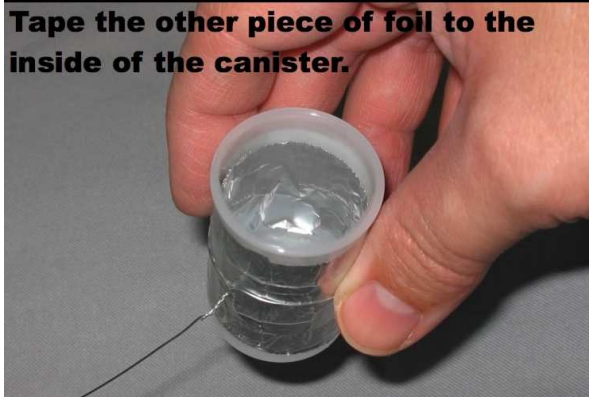

Put the lid on. make sure the wire on the inside touches the foil on the inside. Bend the outside wire as shown.

